

**PROGRAMMING, CP79 ConKey, Upgrading software**



This is the CP79 ConKey



Turn it over and remove 2 screws  
The center rail will be destroyed, you should have received a new rail with the upgrade kit.



Open the ConKey and remove screws holding the circuit board.



The circuit board is gently slid out of the ConKey for access to the micro-controller.

Carefully insert screwdriver between the microcontroller and the socket and twist micro-controller out of the socket.

micro-controller  
socket



**MARKING,  
MUST POINT  
THIS WAY**



When inserting new micro-controller, ensure that it is oriented correctly. Do NOT orient the controller according to paper label, which is manually fitted and could be attached in wrong direction, but ensure that the orientation marking on the controller is pointing to the left.

